

HIGH TEMP HEAT PUMP WATER HEATER

Installation & Instruction Manual

Model:

SWBC-13.0H-A

CONTENTS

I .To our customers(before installation)-----	1
II .Product Introducing-----	2
III .Work principle-----	3
IV .Performance Data-----	4
V .Dimension-----	5
VI .Operation introductions-----	6
VII .Appendix-----	11
VIII .Wire Circuit Diagram-----	12
IX .Installation instructions-----	13
X .Maintenance-----	17

Dear Sir:

In order to use this machine safely, please read this INSTRUCTION MANUAL carefully before using and installation. Heat pump water heater is a professional machine, it may cause damage or hazard when wrong installed, it should be installed by a competent person in accordance with the relevant standards for the country of use.

WARNING:***ELECTRICAL POWER MUST BE SWITCHED OFF
BEFORE STARTING ANY WORK ON JUNCTION BOXES***

- 1. Before installing the heat pump, please ensure that the electrical supply corresponds to the specification indicated on the unit's rating label before proceeding with the connection in accordance with the wiring diagram supplied. Please check carefully on the rating label and the wiring diagrams that pasted on each heat pump unit.**
- 2. The unit must be EARTHED to avoid any risks caused by insulation defects. It is forbidden to start any work on the electrical components without switching off the electrical supply to the unit. Electric leakage switch protection device MUST be installed.**
- 3. It is forbidden to start any work on the electrical components if water or high humidity is present on the installation site.**
- 4. When the unit is being connected, ensure that no impurities are introduced into the pipe work and the water circuits.**
- 5. All maintenance or repair of the heat pump must be performed by competent technicians.**
- 6. It could be hurtful when generated hot water reaches 52 °C, please mix with cold water before using.**
- 7. To prevent any damage to the fan or any accidents, it is forbidden to put your fingers or any other objects into the air outlet. Kids or children should be kept away from the heat pump.**
- 8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- 9. Children should be supervised to ensure that they do not play with the appliance.**

Product Introducing

☉ **Safe and Reliable**

Unlike traditional electric water heater, heat pump water heater do not directly generate heat by electricity , it use less electricity to move heat from one place to another , electric circuit is separated from water circuit ,which is also not easy for electric shock, inflammable , explosion and poisoning ! Safer and more reliable!

☉ **Highly efficient & Energy saving**

Heat pump water heater absorb plenty of heat from free ambient air, and can supply same hot water volume as electric heater. Electricity consumption is only 1/4 compared to electric heater, very energy saving!

☉ **Environmental Friendly**

Heat pump not only use less electricity to get heat from ambient air , but are also able to combine using with solar equipment , will not cause pollution and no poison gas exhausting .

☉ **All Round The Year Hot Water**

Heat pump water heaters are not affected by seasonal climate, provide hot water all year round even in cloudy or rainy days!

☉ **Durable and long-lasting time**

Heat pump spare parts such as compressor and 4-way-valve are made by famous brand manufacturer , and casing panel is corrosion resistance, very durable and long-lasting time .

☉ **Convenient Installation**



Installation site for heat pump can be the roof, the garage , the kitchen, the storing room , the basement and so on, very convenient on installation .

☉ **Wide Application**

Heat pump water heaters are applicable for family, factory, school, hotel , hospital , and laundry ,etc. Wide application for different using request.

Work principle

The low temperature and low pressure refrigerant gas come from the evaporator to the compressor, After the compressor compress it , the refrigerant gas became high temperature and high pressure. Then the gas come into the water condensation into liquid, emit a lot of condensation heat, condensing heat absorbed by water, making the water temperature increased, and then the liquid refrigerant come through the expansion valve, with a fan , the evaporate heat in the air, after all evaporation , the low pressure compressor refrigerant gas inhalation in the compressor, after working through the compressor, a high temperature and high pressure of the refrigerant gas from the compressor to exhaust emissions, such reciprocating cycle.

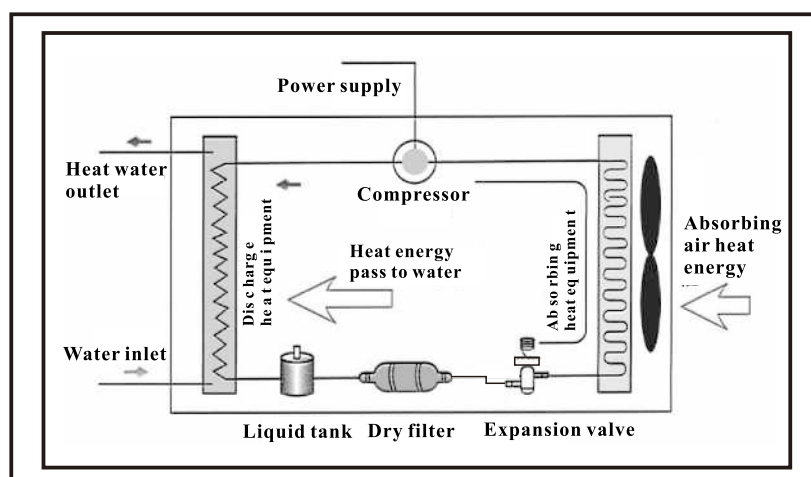
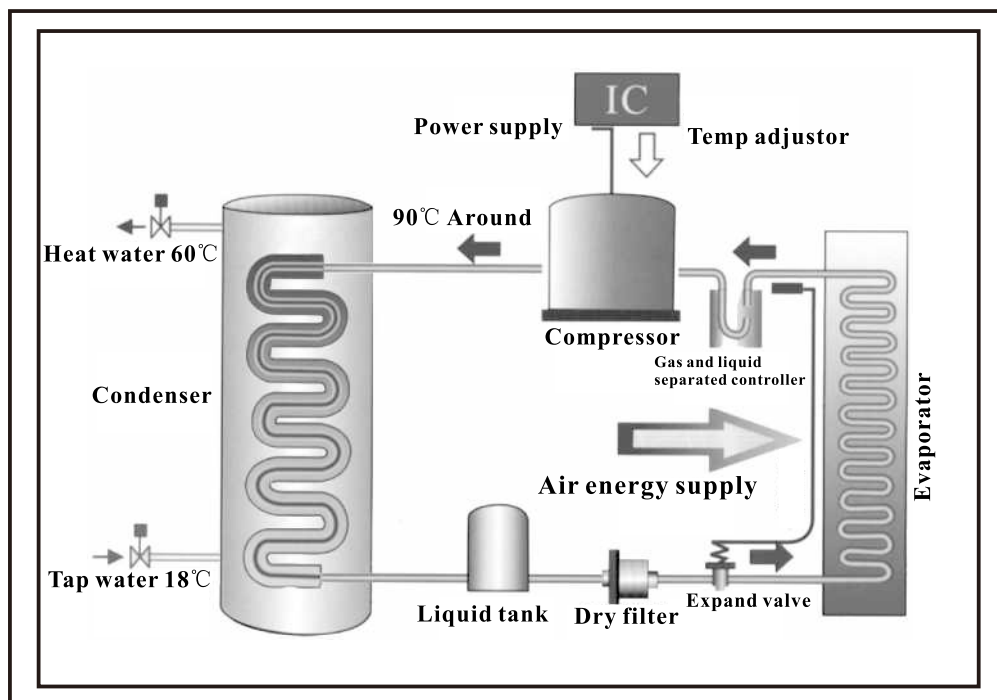


Performance Data

Model		SWBH-13.0H-A
Rated heating capacity(w)		13000W
Power supply(V/Ph/Hz)		220V/1PH/50HZ
Input power(kw)		2.9kw
Running current(A)		16.5A
Circulating unit hot water generated(L/h)	heat up water: 40℃ → 80℃	257L/h
	heat up water: 60℃ → 80℃	460L/h
Thermostat factory setting(℃)		60℃
Thermostat maximum setting(℃)		80℃
Water connections(inch)		1
Compressor quantity		1
Fan motor quantity		1
Fan motor input(w)		350
Fan speed(RPM)		850
Noise(dB(A))		63
Net dimension(mm)		810*860*1055
Net weight(kg)		148

Measuring conditions: dry bulb 20℃, wet bulb 15℃, water inlet 40℃, water outlet 45℃.

● The dimension for high temp heat pump water heater

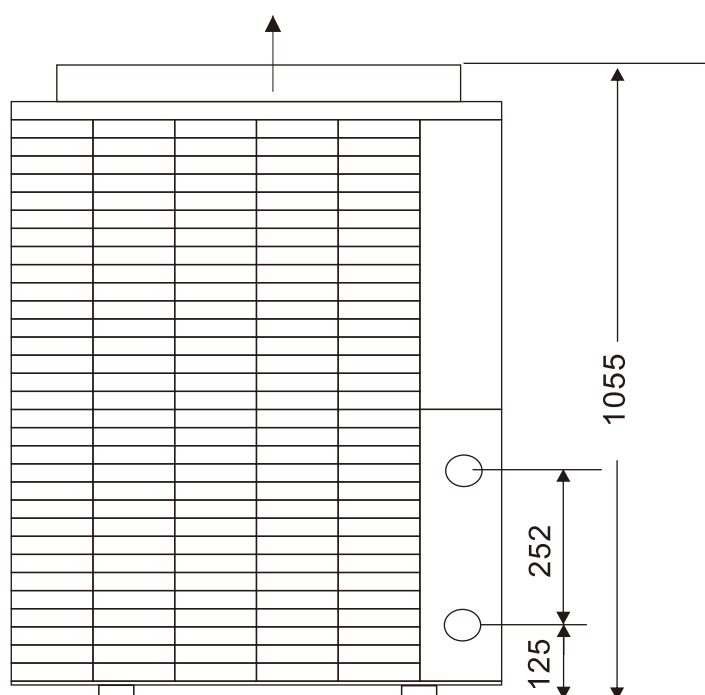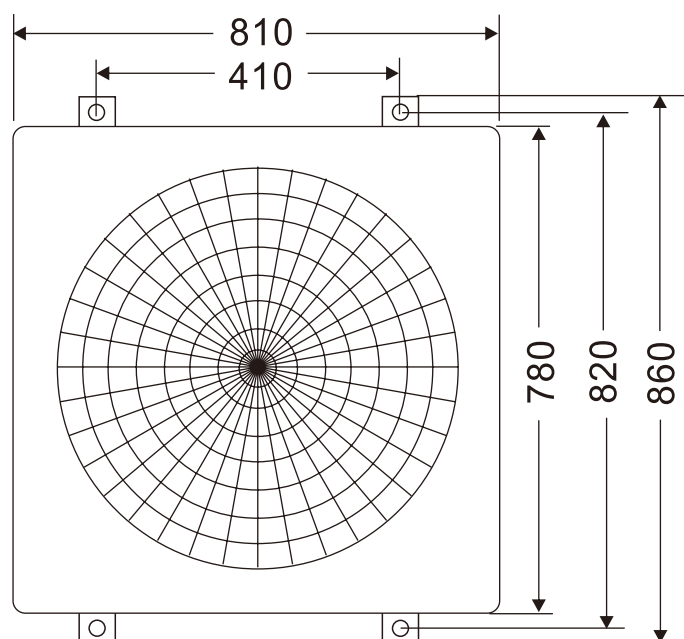


Operation introductions


1. Application

This controller is suitable for the air source heat pump SWBH model.

2. Controller introduction

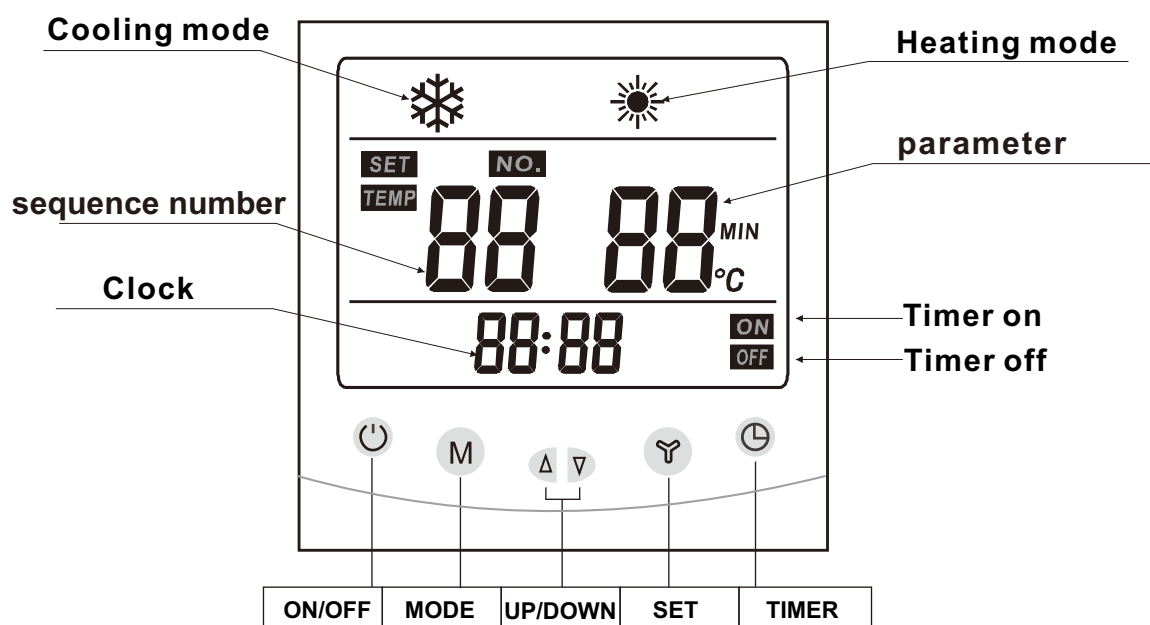


- ◎ When the unit is connected with electricity but not running, the controller will have full-screen display.
- ◎ When in the stand by state, the controller will display the time.
- ◎ When in the start-up state, the controller will display the time and the temperature of the inlet water, the running mode as well.

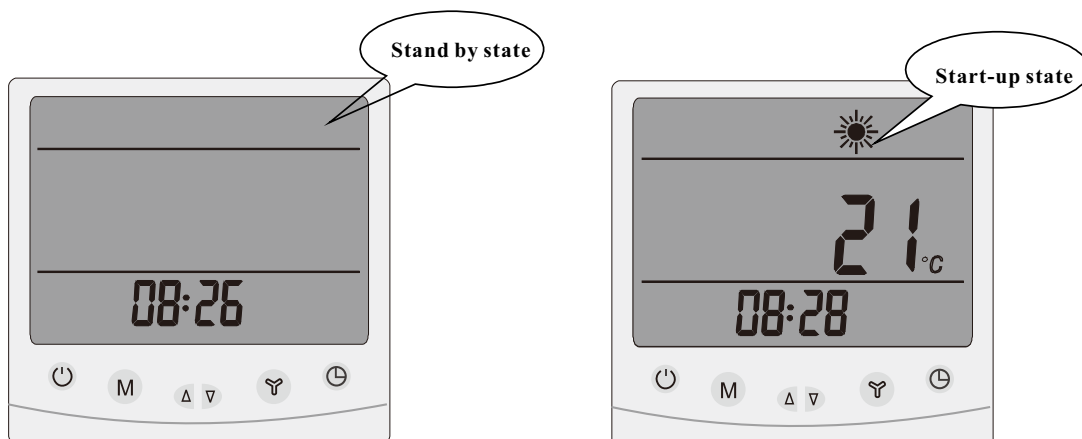

Operation introductions

3. How to set operation parameter

- 3.1 When in the start-up or stand by state, press “ Δ ” or “ ∇ ” button to check the temperature & parameter.
- 3.2 Please note no motion on the display for 10s, it will return to stand by state or start-up state.
- 3.3 Under stand by state / start-up state, Press “ Δ ” again, display “SET” “1” “80”. Press “ Υ ” button, then press “ Δ ” or “ ∇ ” button to adjust the setting temperature of the inlet water. After then, press “ Υ ” to confirm.

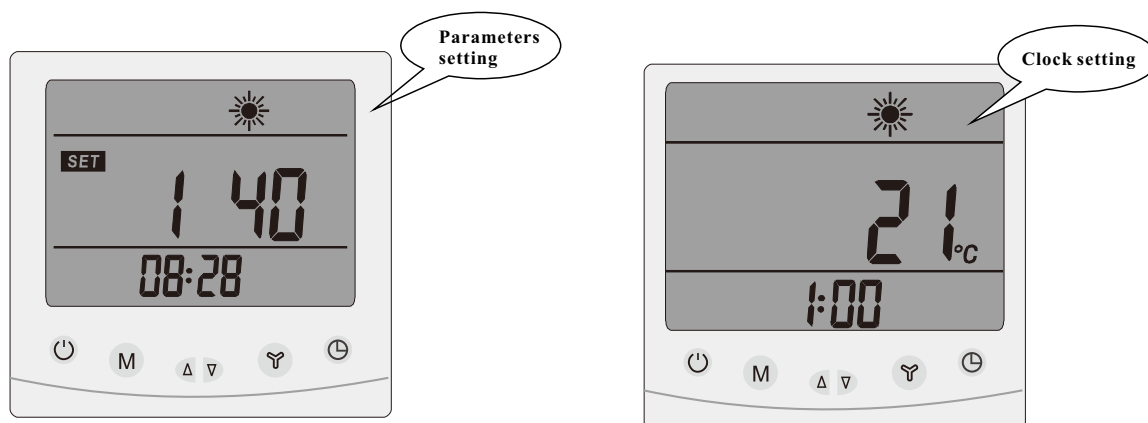


3.4 Clock setting

Under stand by/start-up state, press “ Υ ” button, when the place which shows hour is flashing, press “ Δ ” or “ ∇ ” to adjust the hour; press “ Υ ” button again, when the place which shows minute is flashing, press “ Δ ” or “ ∇ ” to adjust the minute, then press “ Υ ” button again, confirm the clock setting.


3.5 Timer on/off setting

- ☆ Under the stand by/start-up state, press “ \ominus ” button, shows timer and “ON” flashed, press “ \ominus ” button again shows hour data and “ON” flashed, press “ Δ ” or “ ∇ ” to adjust the hour; press “ \ominus ” button again, shows minute data and “ON” flashed, press “ Δ ” or “ ∇ ” to adjust the minute; press “ \ominus ” button again shows timer and “OFF” flashed, press “ \ominus ” button again shows hour data and “OFF” flashed, press “ Δ ” or “ ∇ ” to adjust the hour; press “ \ominus ” again shows minute data and “OFF” flashed, press “ Δ ” or “ ∇ ” to adjust the minute; press “ \ominus ” again, then the timer on and off time setting is finished. If you want to cancel the timer during setting, press “ Υ ” then it will be cancelled.

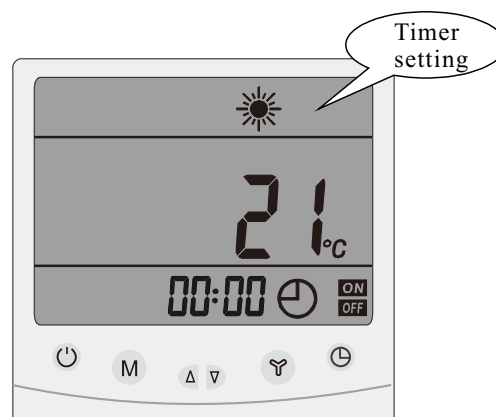

Operation introduction

3.6 Under stand by or start up status, press “ Δ ” or “ ∇ ”, when display “1 30”, it shows the actual tested inlet water temperature(not adjustable).

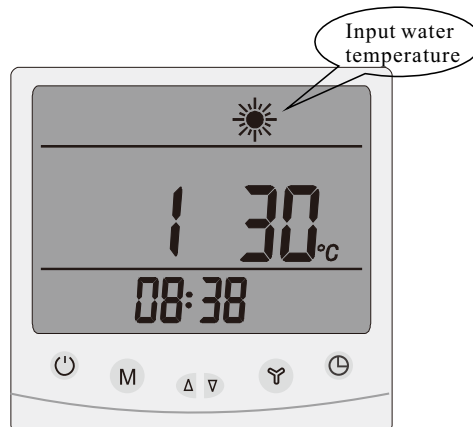


3.7 Parameters

Parameters	Definition	Range	Default	Remark
SET 0				
SET 1	Inlet water temp setting	25-80°C	55°C	Can adjust
SET 2	Defrosting Cycle	30-90Min	40Min	Can adjust
SET 3	Temp to enter defrosting	-30°C-0°C	-7°C	Can adjust
SET 4	Temp to exit defrosting	2-30°C	13°C	Can adjust
SET 5	Defrosting time	1-12Min	8Min	Can adjust
SET 6	Manually or automatically control on EEV	0 manual /1automatically	1	Can adjust
SET 7	System quantity	1,2	1	Can adjust
SET 8	Inlet water temp difference	2-15°C	5°C	Can adjust
SET 9	Second set point maximum temp	65-80°C	80°C	Can adjust
SET A	Second set point minimum temp	40-55°C	50°C	Can adjust
SET B	Working mode of water pump (0: water pump keeps running even set point temp reach and heat pump under standby mode. 1: water pump turns off after compressor stop for 30seconds)	0-1	0	Can adjust
SET C	Over heat degree of EEV	-F(-15°C) ~F(15°C)	5°C	Can adjust
SET D				Not available
SET E	Manual control of EEV	10(100steps)~ 50(500steps)	35(350steps)	Can adjust
SET F				Not available
1	Inlet water temp	0~99°C		Tested data
2	Outlet water temp	0~99°C		Tested data
3	System 1 Coil temp	-35~80°C		Tested data
4	System 2 Coil temp	-35~80°C		Tested data
5	Gas suction temp1	-35~80°C		Tested data
6	Gas suction temp 2	-35~80°C		Tested data
7	Ambient temp	-35~80°C		Tested data
8	Exhaust temp 1	0~125°C		Tested data
9	Exhaust temp 2	0~125°C		Tested data
A	EEV actual step X10	10-47		Tested data

Operation introductions

3.8 Failure code and parameter tables

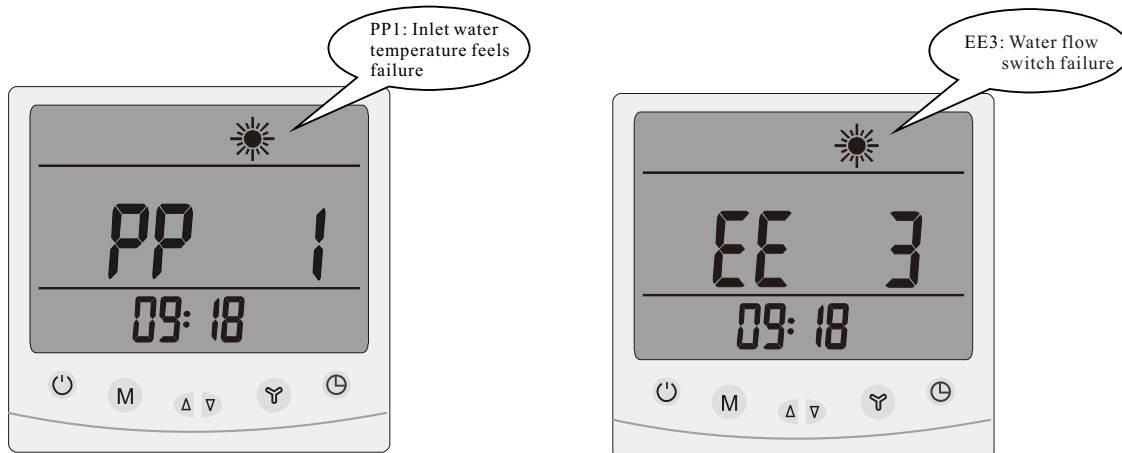


Protect/Failure	Code show in LCD	Remarks
Standby		
Normal running		
Water inlet temp sensor failure	PP 1	
Water outlet temp sensor failure	PP 2	
Coil temp sensor 1 failure	PP 3	
Gas suction temp sensor 1 failure	PP 4	
Ambient temp sensor failure	PP 5	
Coil temp sensor 2 failure	PP 6	
Winter anti-freezing protection (I)	PP 7	
Winter anti-freezing protection (II)	PP 7	
Gas suction temp sensor 2 failure	PP 8	
Exhaust temp sensor1 failure	PP 9	
Exhaust temp sensor 2 failure	PP 10	
Exhaust 1 high temp protection	PP 11	
Exhaust 2 high temp protection	PP 12	
System high pressure protection	EE 1	
System low pressure protection	EE 2	
Water flow switch failure	EE 3	
Wrong phase/ open phase	EE 4	
Wire controller failure	EE 8	
Defrosting	Defrosting sign	

3.9 Force defrost

Under stand-by mode, press **M** for 5 seconds to enter force defrosting.


BH Series Water Pipe System Drawing

Circle Type Water Heater Water Pipe System Drawing
High-efficient Heat Exchanger

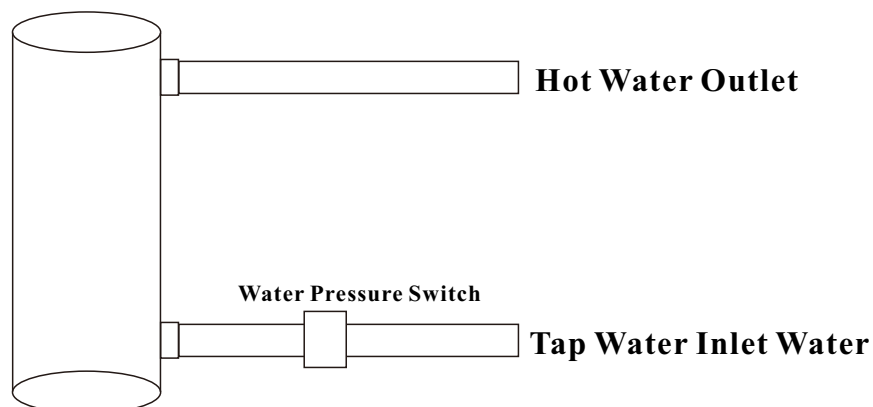

VIII.Wire Circuit Diagram

Water heater

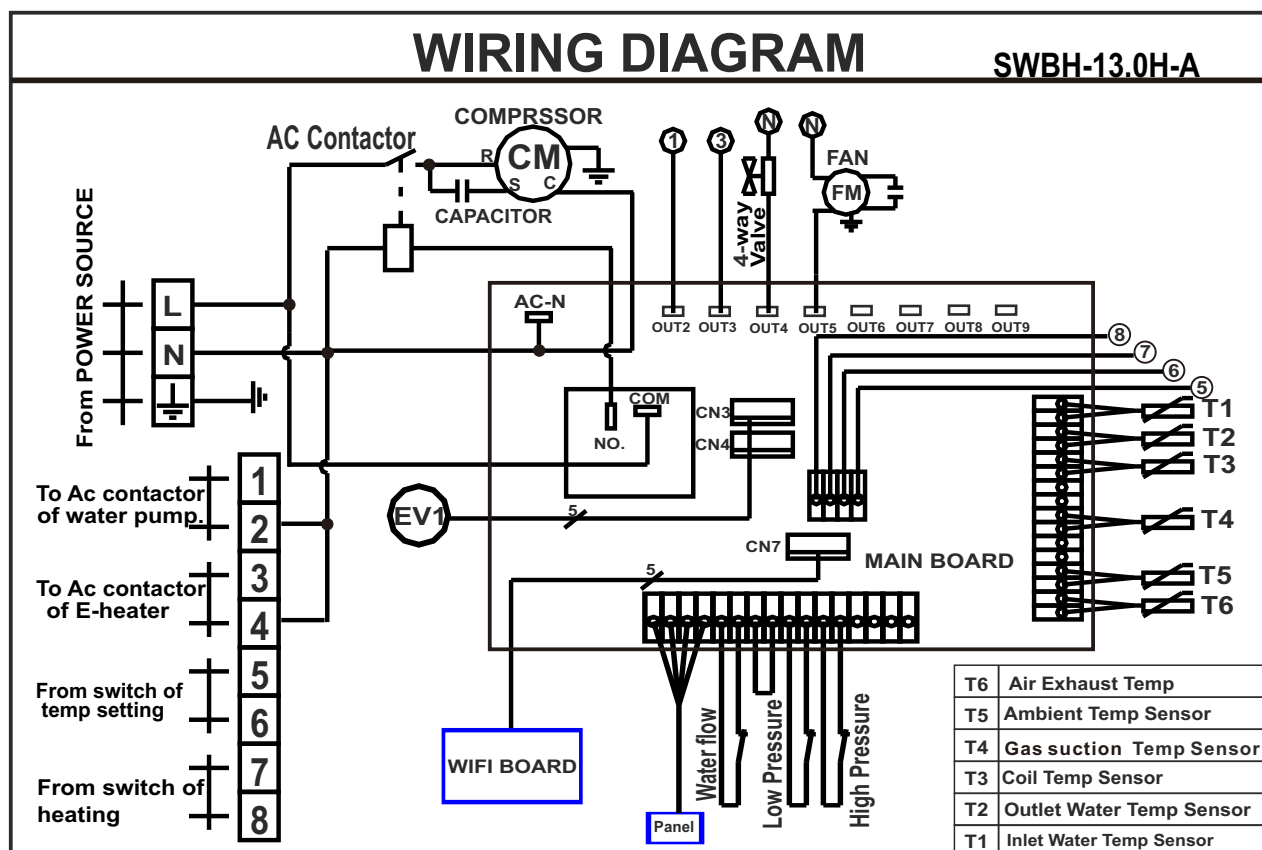


Installation instructions

1. Unit installation

1). Installation location

Host unit

- ☐ Should be installed in a larger & well-ventilated place.
- ☐ Installation location should ensure unhindered access outlet (inlet & outlet shown as below).
- ☐ Install gutter or set up positions near the outfall, to facilitate the drainage.
- ☐ The installation base or bracket should be steady, to ensure the smooth operation of running units.
- ☐ Make sure the unit is vertical after installation, and no incline.
- ☐ Make sure not to install the host unit in the any conditioner of pollution, corrosive gases, sun and fallen leaves, etc.
- ☐ Installation location must not next to place of incensive , easy-explosion and fire .
- ☐ Installation must pay attention to the distance between the barriers shown in below picture (pay attention to arrow direction).

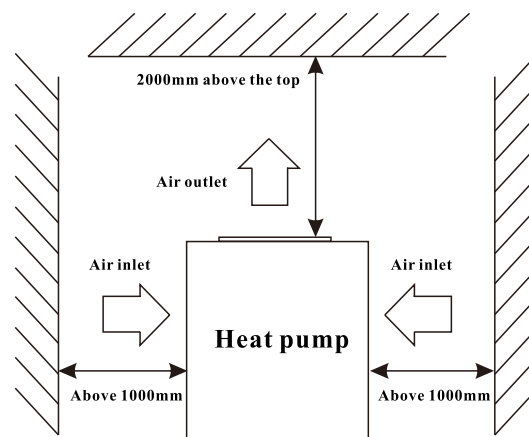

Water tank

- ☐ Water tanks should be placed where ambient temperature is above 0°C .
- ☐ Can be installed outdoors or the top of the building (based on the size of water tanks and the load-bearing capacity of the building and so on).
- ☐ Do not install water tanks in the pollution, corrosive gases place.

2). Unit installation

- ☐ Units base can be installed as cement concrete structures, steel brackets can also be used, add the shockproof rubber pads , make the base surface flat.
- ☐ Units can be designed based on the working performance.
(See Table of technical performance parameters)
- ☐ Unit should have drain or drainage inlets.
- ☐ Normally required to install in the place where setted cement concrete base.

Installation instructions

2. Pipeline connecting

Installation notes:


- Water drain pipes, overflow pipes should be installed next to the drainage inlets to facilitate drainage, vent valve should be installed on vent pipes.
- Repair valve should be installed in front of the electromagnetic valve on the pipeline system, which is convenient for future repair.
- User water pressure should less than 0. 6 Mpa.
- All pipelines should choose metal pipe (such as stainless steel, with Lining Plastic and lining stainless steel and thin-walled copper pipe or, etc.). The use of plastic pipe (such as the PP-R, ABS, etc.) should consider the pipeline expansion between the host unit and water tanks .
- Water supply and pause valves may need to keep warm in the winter (according to the local winter temperature) to avoid the broken of water supply and pause valve.

Water system installation

- All the pipeline tubing should be matched as shown on the manual, and in accordance with national corresponding construction standards.
- Installation of water pipes should be straight and flat, pipeline collocation should be rational, ensure to minimize bending; reduce the resistance loss of the water system.
- Pipeline and connecting parts are not allowed a leakage phenomenon.
- After the installation of circulating pipe between tap water pipes, host unit and water tanks ,should carry out water leakage testing, and eject the sewage to ensure the sy stem's cleanness.
- If no water leakage, keep the hot water pipe warm.

3. Project example:

Application of heat pump water heater engineering systems have different forms. Here are a sample of one heat pump connect to the water tank to offer hot water, only for your reference.

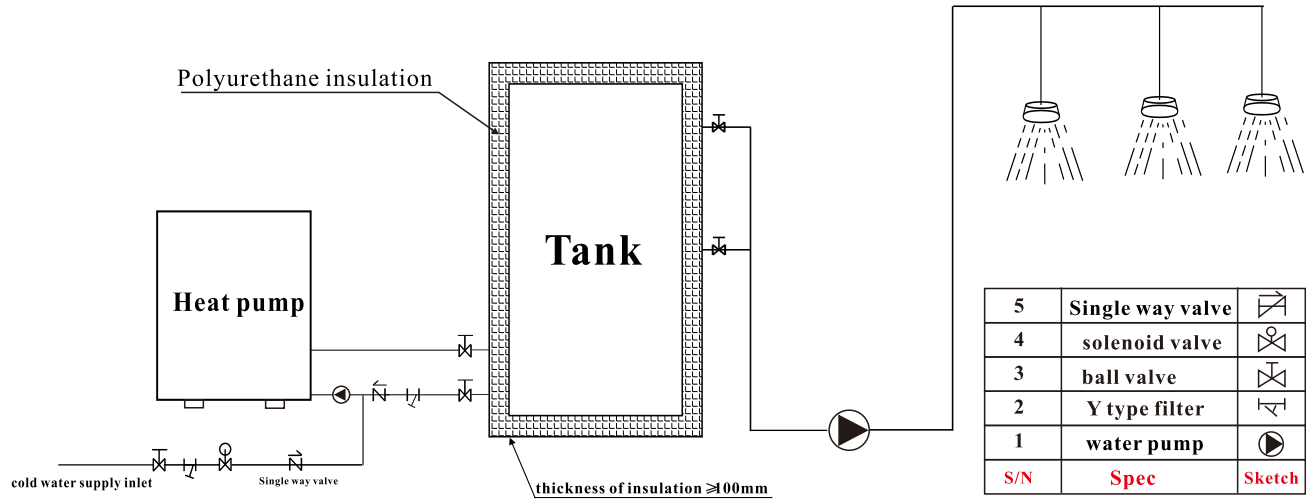

WARNING!

Due to the high temp heat pump could offer much hotter water (70-80 deg c) than the usual heat pump (60 deg c).

The water piping and insulation of water heat exchanger should be once or twice more thicker and more stronger. Better to be more than 50mm.

Highly suggest to use waterproof insulation piping when the unit install outdoor.

All water piping, valve, water flow switch , circulation pump use in high temp heat pump must be Allow to work between 0 to 100 deg c. Due to the high temp heat pump could offer max 70- 80 deg c hot water.

The tank connect to high temp heat pump should be difference from the one use in usual heat pump (60 deg c hot water outlet).

A air valve or a pressure relief valve should be add in the tank. And insulation of water tank must be thicker than 100mm.

Running Test and operation

1. Preparatory work before the running test.

a) Inspection of heat pump water heater units:

- ☐ Check if the unit appearance and the pipeline system were damaged during transport.
- ☐ Check if there is air exist in the water pipes, if yes, should empty all the air inside by the manual exhaust valve and the exhaust valve on the water pumps.
- ☐ Check if the fan motor interference the fan fixing board and fan protection net.

b) Check the electricity distribution System

- ☐ Check if the power supply same as shown on manual and rating label.
- ☐ Check if all the power supply and control wiring are all well connected, check if the wiring is connected as wiring diagram and reliability of earth wiring.

c) Check Pipeline system

- ☐ Check the pipeline system, make sure the water supply pipes, water return pipes, pressure gauges, thermometers, valves, water flow switch are safe and correct.
- ☐ Check if having opened all the valves that should be opened, and having closed all valves that should be closed.
- ☐ Check if all necessary attemperators are good.

Running Test and operation


2. Running test

This running test must be performed by professional staff!

- ☐ Overall test can be run if the entire system inspection is conformed to regulations.
- ☐ Connected to power, start the heat pump, host unit delays three minutes then auto-start. For three-phase power supply unit, first check whether the fans and pumps' rotary direction correct or not, if not, immediately shut down the power and adjust phase sequence. Measure the compressor operation current, and if any abnormal noise, Check whether the unit conform to the requirements, run for a period of time (general 3 days), after that, the unit can be used normally.

3. Normal operation

- ☐ Heating process: start - up - water pumps runs - water flow switch inspection --- Fan operation compressor operation (when the low water level cut off, water supply induction valve opens
- ☐ Operation Control:

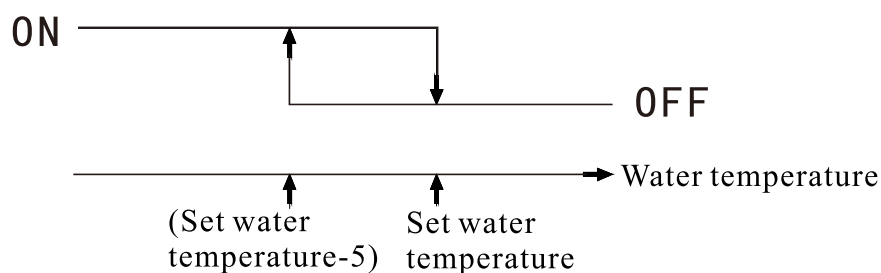

- ☐ Water level control: When the low level switch disconnect, open the water supply induction valve to supply enough water, meanwhile stop the water supply pump. Open the water supply pump when high level switch closed, After high-level switch closed for two minutes, open water supply induction valve (at least 2 minutes).
- ☐ When water pump is on and the high level switch cut off, if water temperature $< (\text{set Temperature} - 5 \text{ degrees})$, shut down water supply for tanks, If water tank temperature $> (\text{temperature} - 2 \text{ degrees})$ then open the water supply induction valve, after high-level switch closed for two minutes stop the water supply induction valve. When water pumps stopped, whatever conditions, should supply enough water. (Water supply switch on at 2 minutes).
- ☐ For the first power-on boot, the circulating water pump, compressor, fan motor runs after low level switch closed.
- ☐ During the unit operation, circulating pump open. When the unit stopped, the circulating pump will be delayed 30 seconds then stop functioning.
- ☐ When water pumps open, meanwhile open water return induction valve, 10 minutes later, test the return water temperature, when the return water temperature $> (\text{water temperature} - 5 \text{ degrees})$, the return water induction valve stops. If the return water temperature $< (\text{tank water temperature} - 10 \text{ degrees})$, open the water return valve so that the water supply pump constantly store the hot water. When water supply pump closed, shut down the water return valve at the same time.
- ☐ For normal start-up, the 4-way valve cut off, only when defrosting, the unit will work in normal.

Maintenance

Heat pump water heater is a high automatic equipment, please perform regular inspection termly. If the unit can be long-term and efficiently maintenance, the operating reliability and service life will have an unexpected increase.

- 1.The extra water filters should be cleaned regularly to ensure clean water quality of the system, and to avoid damage caused by dirty water filter blocking.
- 2.Users should pay attention for usage and maintenance to below : all units' protection devices are set up before leaving factory, do not make any adjustment by yourself.
- 3.Frequently check the power supply and electrical wiring system is solid or not, whether electrical components are abnormally working, if yes, should timely maintenance and change for a new one.
- 4.Perform regular checks of the water supply system, check whether the tank safety valve, liquid level controller and exhaust devices work properly, so as to avoid air into the system, and reduce the water cycle volume, thus affect the heating function and operation reliability.
- 5.Check whether pumps and water valves are normal working or not, whether water tubing and water pipes connector are leakage or not.
- 6.The unit and around should remain clean, well-ventilated. Regularly clean (1-2 month)the side air heat exchanger to maintain a good effect of heat exchange.
- 7.Frequently check whether each part of the unit work normal or not, check whether there is oil on the pipeline joints and charging valve to ensure that no refrigerant leakage.
- 8.Do not piling up debris around the unit, so as not to block from air inlet and outlet, the unit around should be kept clean the dry, well-ventilated.
- 9.If the unit stops for a longer time, should drain all the water in the pipeline, cut off power supply, and sets the protective equipment.When re-run the unit, complete inspection is a must before reboot.
- 10.When unit failure, and the user can not resolve the problem, please call our Company in local maintenance department, in order to promptly send people for maintenance.
- 11.Host condenser cleaning.We propose to use 50℃-60℃, and 15% hot phosphoric acid for condenser cleaning, launch the circulating pump of the host unit for three hours' cleaning, finally rinse with water three times. (Propose to back up a 3-way connector when installing the pipeline, block one joint),in order to clear the connection pipe. Do not use corrosive cleaning fluid for condenser cleaning.
- 12.Water tanks need to remove theWater scale after some time (normally two months, according to the water quality of local place).

High Temp Heat Pump-Water Heater
